

Doheny's[®]

Pool Supplies FAST!

Cartridge Filters

Item #s 2605, 2608 & 2609

Operating Instructions:

1. Place Cartridge Filter on flat surface.
2. Tighten locking ring-clockwise (may need to push tab down).




3. Open gate valve between pump and filter, and make sure all discharge valves are open when starting the system.

▲CAUTION: Failure to do so could result in severe personal injury and/or property damage.

4. Run Pump (tighten the 1-1/2 in. drain plug before running the pump).

Note: May need to use a screwdriver to loosen or tighten plug, see below.

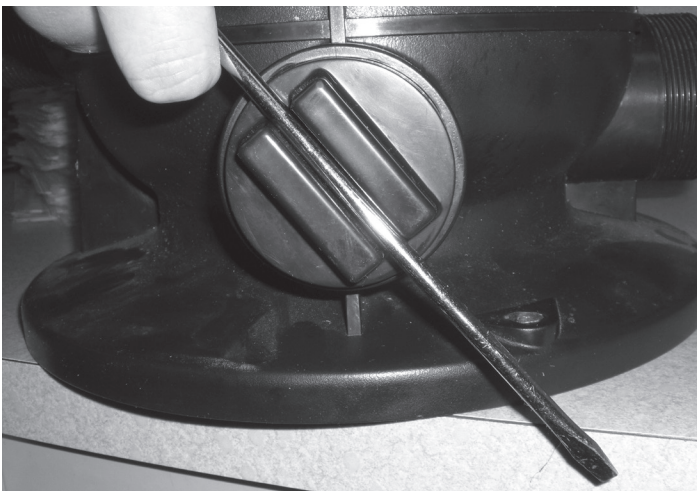

5. Turn air relief valve counter-clockwise in filter head until loose.
6. When a steady stream of water is discharged from the valve, tighten air relief valve by rotating valve clockwise.

Filter Maintenance:

Clean or replace filter element when gauge pressure increases 5-7 psi above starting pressure.

1. Turn pump off before servicing.
2. Close all pool water valves to prevent backflow from pool.
3. Open air relief valve by turning valve counter-clockwise until loose.
4. Loosen the 1-1/2 in. drain plug, so water from filter will drain.
5. Open locking ring counter-clockwise, and remove the filter element.
6. Clean the filter element with a garden hose, meanwhile remove debris from filter tank bottom.
7. Re-assemble filter element. Tighten locking ring.
8. Follow all operating instructions above.

Store:

If not using for a long time, please remove drain plug to allow water to drain from filter. Store filter system in a cool, dry place.

Filter Specification:

MODEL NO.	2605	2608	2609
EFFECTIVE FILTRATION AREA	25FT ²	50FT ²	70FT ²
DESIGN-FLOW RATE	25GPM	50GPM	70GPM
MAXIMUM WORKING PRESSURE	50PSI 3.5BAR	50PSI 3.5BAR	50PSI 3.5BAR