


The Total Solution for Pool and Spa Access

9889 Garrymore Ln | Missoula, MT 59808 888-687-3552 | +1-406-549-0769 www.aquacreek.com

Stainless Steel Wheelchair

GENERAL WARNINGS

- 1) BEFORE USING THIS WHEELCHAIR, READ THIS MANUAL AND SAVE FOR FUTURE REFERENCE.
- 2) ALWAYS INSPECT THE WHEELCHAIR TO ENSURE THAT IT IS PROPERLY POSITIONED AND STABLE BEFORE USING. **DO NOT** USE IF WOBBLY OR UNSTABLE.

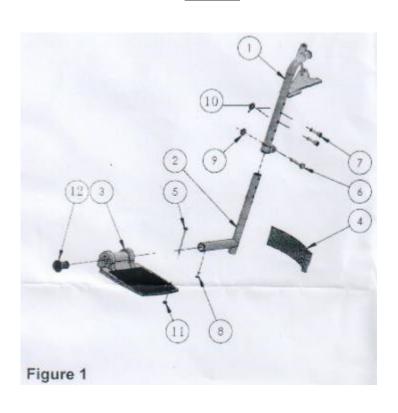

| ITEM# | QTY | DESCRIPTION |
|-------|-----|-------------------------|
| 1 | 1 | UPPER FOOTREST WELDMENT |
| 2 | 1 | LOWER FOOTREST WELDMENT |
| 3 | 1 | FOOTREST PLATE |
| 4 | 1 | FOOTREST STRAP |
| 5 | 1 | FOOTREST PIN |
| 6 | 1 | M8X30 SCREW SS |
| 7 | 2 | M6X30 SCREW SS |
| 8 | 2 | 5X12 RIVET |
| 9 | 1 | M8 NUT SS |
| 10 | 2 | M6 NUT SS |
| 11 | 1 | M6 NUT SS |
| 12 | 1 | PLASTIC CAP, BLACK |

ADJUSTING FOOTREST HEIGHT (REFER TO FIGURE 1)

- 1) USING THE TOOL PROVIDED, UNSCREW THE NUTS (ITEMS 9 & 10) AND REMOVE THE SCREWS (ITEMS 6 & 7).
- 2) PULL LOWER FOOTREST WELDMENT (ITEM 2) DOWNWARD; ADJUST TO SUITABLE POSITION.
- 3) REPLACE THE SCREWS AND NUTS AND WRENCH TIGHT TO SECURE (ITEMS 6, 7, 9 & 10).

NOTE: MAKE SURE THE TWO PEDALS ARE ADJUSTED TO THE SAME HEIGHT AND ENSURE THE BOTTOM FOOT SCREW IS SCREWED TIGHT.